For more information:
www.PelicanWater.com
Toll free: **(877) 842-1635**

1 Year Parts Warranty

Pelican gives this warranty to the customer in lieu of all other warranties, express or implied, including without limitation any implied warranties of merchantability or fitness for a particular purpose or treatment of certain water and hereby expressly disclaims all other such warranties. Pelican's liability hereunder shall not exceed the cost of the product. Under no circumstances will Pelican be liable for any incidental or consequential damages or for any other loss, damage or expense of any kind, including loss of use, arising in connection with the installation or use or inability to use the Covered Items or any water treatment system the Covered Items are incorporated into. These warranties are governed by the laws of the state of Florida and may change at any time without notice.

Facebook.com/PelicanWater

© Copyright 2014 Enviro Water Solutions LLC. All rights reserved.

Pelican®
Water Systems

Installation Instructions

Pelican Whole House Installation Kit

(Single Tank)

Included

A. (1) Roll of Teflon Tape
B. (1) John Guest 1” Male NPT Connector
C. (3) John Guest 1” NPT to Stem
D. (2) 1” John Guest to Clack 24” Stainless Flex Pipe
E. (2) Threaded Collars (Preassembled)
F. (2) Split Rings (Preassembled)
G. (2) Orings (Preassembled)

Prepare Prefilter

Note: Before starting this step, be sure to have your prefilter housing mounted following the instructions that came with the system you purchased.

1. **Wrap Teflon tape 1-2 times around the threaded end of the John Guest 1” Male NPT Connector.** (we recommend applying pipe dope as well)
2. **Thread (B) John Guest 1” Male NPT Connector Fitting onto INLET side of prefilter housing.**
3. **Hand-tighten and follow with 1-2 turns using a wrench.**
4. **Wrap Teflon tape 1-2 times around the threaded end of (C) John Guest 1” NPT to Stem**
5. **Thread (C) John Guest 1” NPT to Stem to the OUTLET side of the prefilter housing.**
6. **Hand-tighten and follow with 1-2 turns using a wrench.**

Final Installation

1. **Bring main cold water line from street and plug into John Guest connection on INLET side of prefilter.**
2. **Pull out slightly after inserting to ensure a solid connection.**
3. **Turn collar on fitting clockwise to lock in place.**
4. **Push John Guest Quick-Connect End of 24” Stainless Flex Pipe into the OUTLET Male Stem of the prefilter.**
5. **Pull out slightly to ensure a good seal.**
6. **Attach Clack quick-connect end of 24” Stainless Flex Pipe to INLET side of Tank Bypass. Hand tighten only.**
7. **Attach Clack quick-connect end of 24” Stainless Flex Pipe to OUTLET side of Tank Bypass. Hand tighten only.**
8. **Push John Guest connection end of 24” Stainless Flex Pipe into water line going into the home.**
9. **Pull slightly to ensure a proper seal.**

Special Note for PVC Customers: John Guest fittings will only connect to Copper, cPVC and PEX. For your convenience, we have included 2 additional John Guest 1” NPT to Stem to convert your PVC pipes to the Pelican Pro Kit. Simply insert the stem ends of each fitting into the John Guest Ends of the Fleck Pipe and INLET side of the prefilter and thread your PVC to the 1” Male threaded NPT end of the stem fitting.

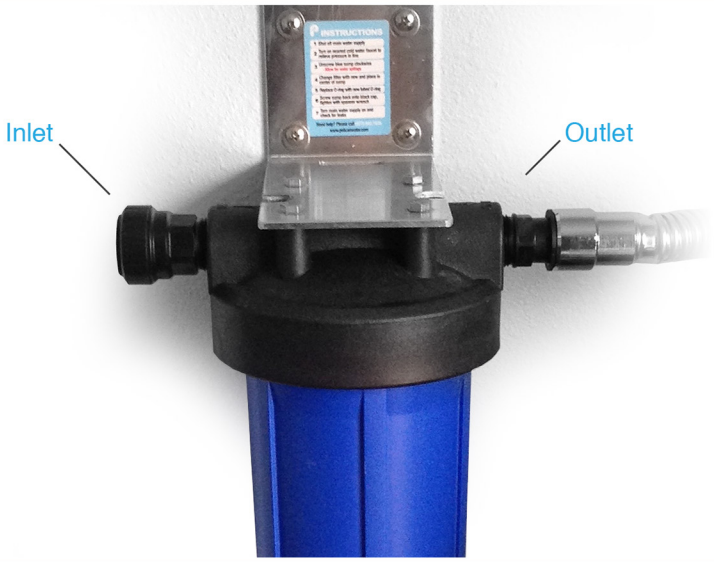

Prepare Prefilter

Final Installation